


Short Instruction

personalguide™



Operation

- To turn the audioguide on, hold down the stop key down for several seconds. The player displays the language selection menu first.
- Choose your language by scrolling with the fast forward and fast reverse keys.
- Confirm your choice with the play key.
- Enter the number of the exhibit (i.e. 012) and start the commentary with the play key. If you enter the wrong number by mistake, use the clear key. You can pause playback with the pause key.
- You can skip forward and backward through the commentary with the fast forward and fast reverse keys.
- To end the audio tour, press the stop key.
- Press the help key for brief operating instructions.
- To turn the player off, hold down the pause key for several seconds.

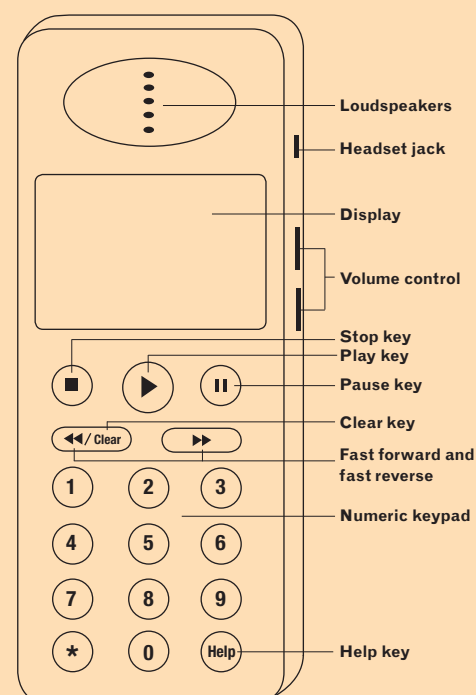



Charging

Switch on the charging station and place the audioguide in it. A full charge takes ca. 1.5 hours if the battery is empty. When charging is complete, "battery full" will appear in the display.

The audioguide battery supports more than 14 hours of continuous operation and does not need to be charged after each use. To preserve battery life, we recommend charging your audioguides every other day.

Cleaning

We recommend using a soft dustcloth (i.e. microfiber) dampened with glass cleaner to clean your audioguide. Avoid getting the audioguide too wet and never submerge it in water.

The same method may be used on the headsets. We recommend washing the black ear cushions and carry loops once a month in 30 – 40 degree water.

Replacement or disposable ear pads for the headsets are available by order.



Troubleshooting

If the audioguide does not respond and you are sure the battery is charged, you can use a paperclip to activate the reset button located on the back of the audioguide.

If the audioguide still does not respond, try resetting it again on the charging station.

If you have any questions or difficulties, please ask us. We are here to help.